



Angled Surface Mount Post Installation Guide



Before You Begin

Ensure your mounting surface has sufficient backing. Viewrail recommends a minimum of 4 inches.

Items You'll Need

Power Drill
Post Level
Post Shims
String

For more information or installation help, go to www.youtube.com/Viewrail

1 Place posts on treads according to your drawings, ensuring they are all set the same distance behind the riser

2 Run string along the top of the posts to ensure the angle is correct for handrail to be mounted



3 Run string through bottom holes to ensure infill won't hit nosing

Note: This step is not applicable to installations with glass infill

4 Verify the distance between posts against your drawings

5

6 Pilot holes must be 3/16" x 4"

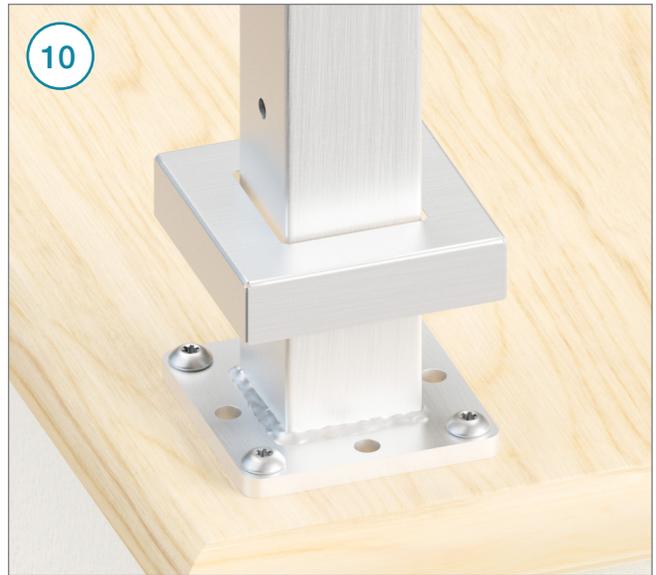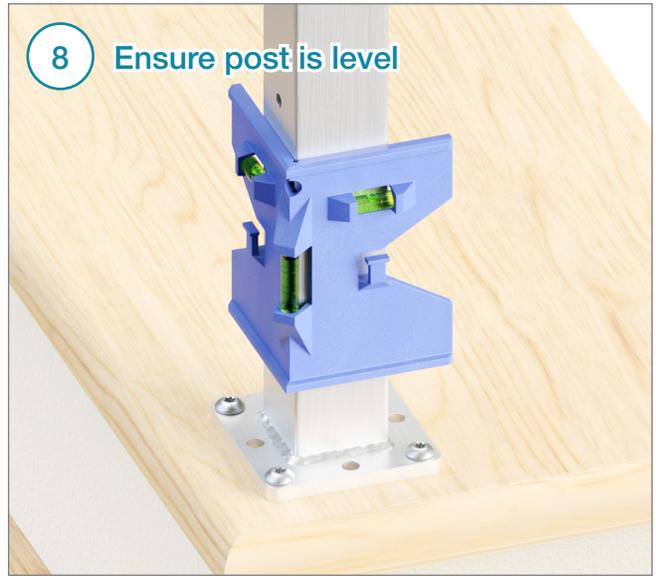



Congratulations! Your Install is Done

We'd love to see your work! Snap a few pics with your phone and send them to pictures@Viewrail.com. Thanks for choosing Viewrail. Enjoy your new installation!