




Wall Mounted Handrail Bracket Component Assembly

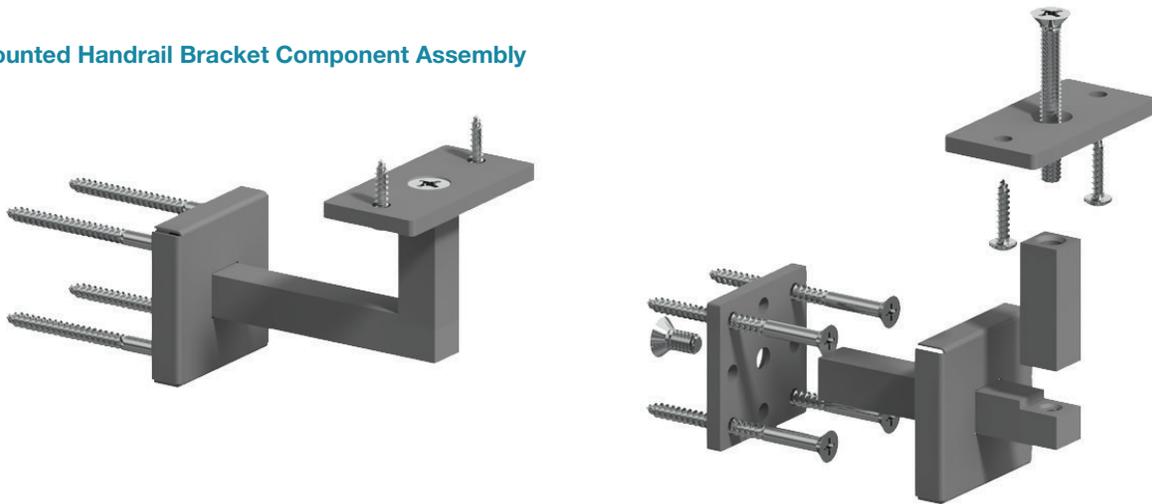

Other Tools and Supplies Not Included in the Installation Kit

- Tape Measure
- Chalk Line Tool
- Stud Finder
- Phillips Screw Driver
- Drill

Things to Know Before You Get Started

- Read over the provided material prior to the start of your installation



Wall Mounted Handrail Bracket Installation Steps




- Following your local code, measure straight up from the front of your first and last step
- Mark where your brackets need to be
- Take into account the bracket & handrail height



- Snap a chalk line diagonally between the 2 marks




- Using a stud finder, mark the locations of your studs on the chalk line
- Keep in mind, handrail brackets should be no more than 4 feet apart
- Choose the stud locations you wish to use to mount your brackets on

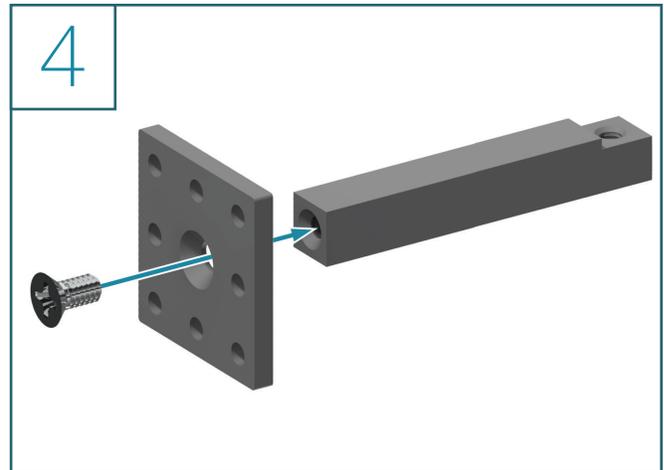


- Using the 1/4" - 20 x 1/2" screw, attach the mounting plate to the base stem


Wall Mounted Handrail Bracket Installation Steps (Continued)

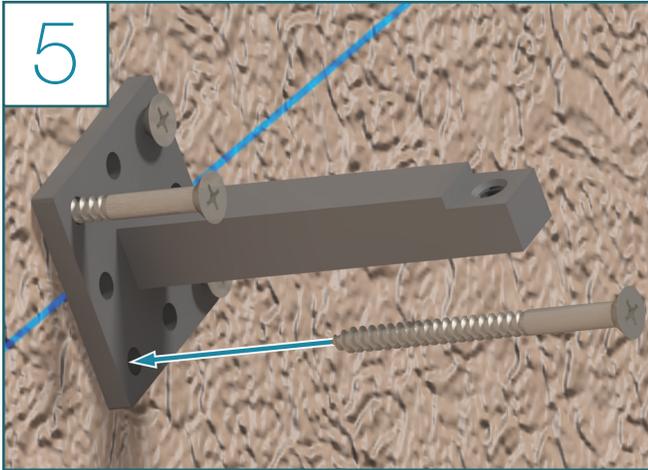


- Angle the bracket in the marked locations to match the angle of the chalk line
- Use the provided #10 - 13 x 2 1/2" screws to populate 4 of the 8 hole locations into the stud

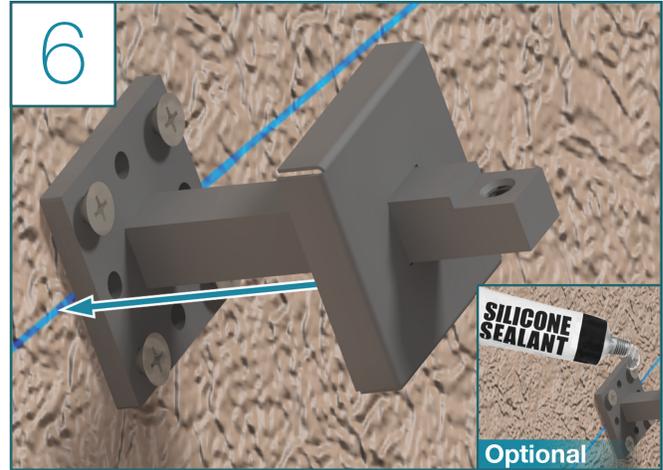

- Slide the Bracket Cover over the stem & into place
- **Optional Step:** Secure the Bracket Cover in place with Silicone or Epoxy

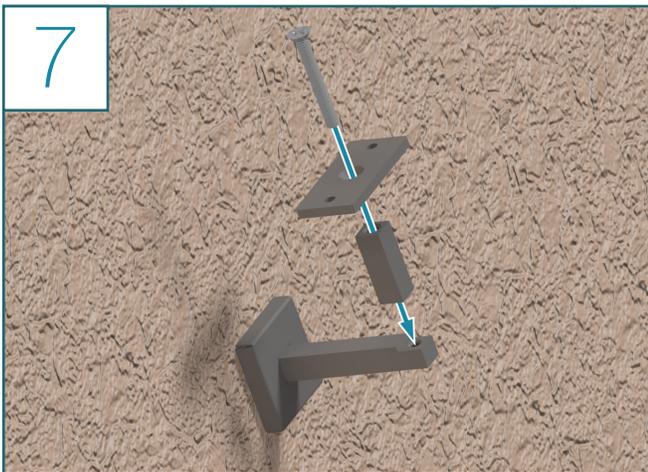

- Using the 1/4" - 20 x 2" screw, attach the top bracket and pillar to the base stem

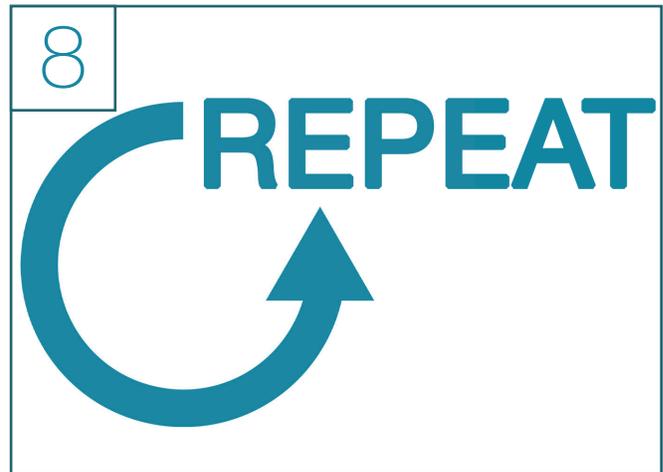

- Repeat Steps 4-7 for the remaining brackets

Congratulations!
You're done with this section.

We'd love to see your work! Snap a few pics with your phone and send them to pictures@viewrail.com. Thanks for choosing Viewrail. Enjoy your new installation!