



Quick Slide Wall Mounted Handrail Bracket Installation Guide HANDRAIL



#### Wall Mounted Handrail Bracket Component Assembly

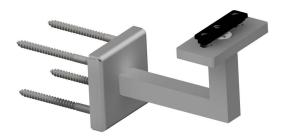

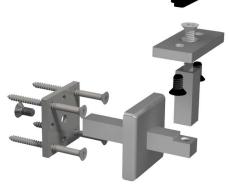

#### Other Tools and Supplies Not Included in the Installation Kit

- Tape Measure
- Chalk Line Tool
- Stud Finder
- Phillips Screw Driver
- Drill

## Things to Know Before You Get Started

• Read over the provided material prior to the start of your installation



Visit our YouTube channel to watch helpful installation videos youtube.com/viewrail




### **Quick Slide Wall Mounted Handrail Bracket Installation Steps**




- Following your local code, measure straight up from the front of your first and last step
- Mark where your brackets need to be
- Take into account the bracket & handrail height



• Snap a chalk line to mark diagonally between the 2 marks (a laser level would work as well)

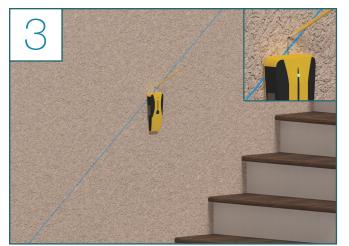


- Using a stud finder, mark the locations of your studs on the chalk line
- Keep in mind, handrail brackets should be no more than 4 feet apart
- Choose the stud locations you wish to use to mount your brackets on

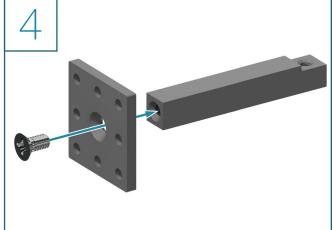


 Using the <sup>1</sup>/<sub>4</sub>" - 20 x <sup>1</sup>/<sub>2</sub>" screw, attach the mounting plate to the base stem




# **Quick Slide Wall Mounted Handrail Bracket Installation Steps (Continued)**

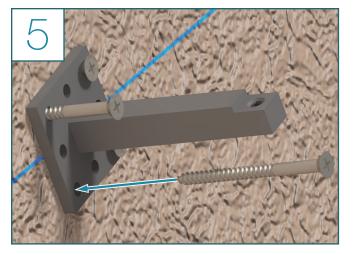

- Angle the bracket in the marked locations to match the angle of the chalk line
- Use the provided #10 13 x 2<sup>1</sup>/<sub>2</sub>" screws to populate 4 of the 8 hole locations into the stud

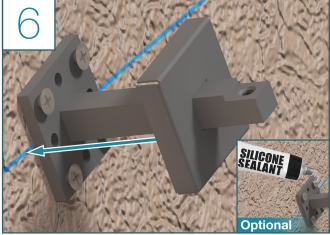

- Slide the Bracket Cover over the stem & into place
- **Optional Step:** Secure the Bracket Cover in place with Silicone or Epoxy

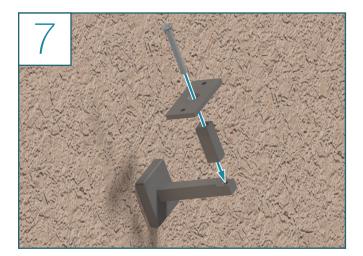

- Using the <sup>1</sup>/<sub>4</sub>" 20 x 2" screw, attach the top bracket and pillar to the base stem
- Repeat Steps 1-7 to install all your wall mount brackets




- Locate wall mount handrail and cut to length
- If your handrail was designed to have returns, cut the ends of the handrail at 45° and cut your return pieces as well




# **Quick Slide Wall Mounted Handrail Bracket Installation Steps (Continued)**



- Insert all your quick slide nut retainers into the handrail (before attaching your returns. This will be the last time you can access the channel)
- Note: there should be 1 nut retainer per bracket and if you have mitered returns you should have 2 per corner (1 on each side of the miter

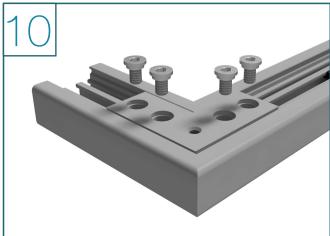

• If you have mitered corners, install the corner brackets with the provided bolts

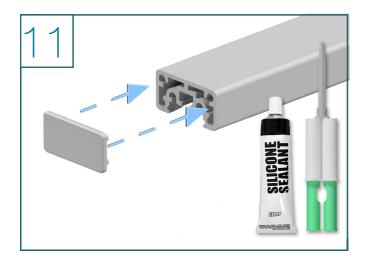

- At this point you can install your end plugs
- You can use epoxy or silicone to attach them
- At this point your handrail should be ready to put on your wall



- Take your handrail and place it on the brackets
- Utilizing your stubby Allen or a long screwdriver, push the retainer nuts where they sit above each bracket
- You can utilize O rings (#8's) to keep the retainer nuts from sliding down the channel
- Install the bolts into the retainer nuts at each handrail bracket
- Your handrail is now fully installed

# Congratulations! You're done with this section.

We'd love to see your work! Snap a few pics with your phone and send them to pictures@viewrail.com. Thanks for choosing Viewrail. Enjoy your new installation!